





 
Vandal Dome Network Camera Hardware Installation

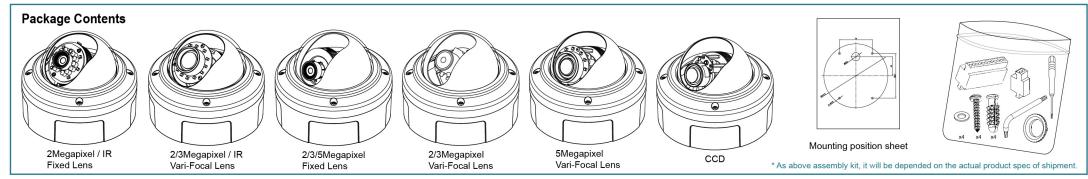

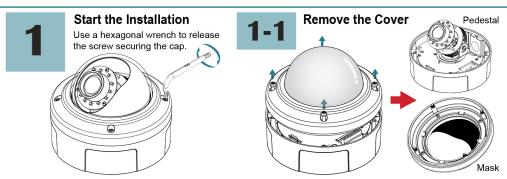


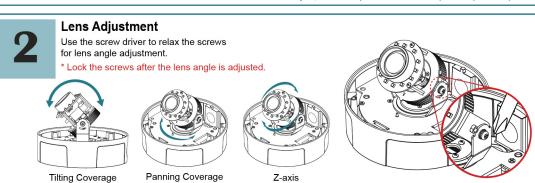


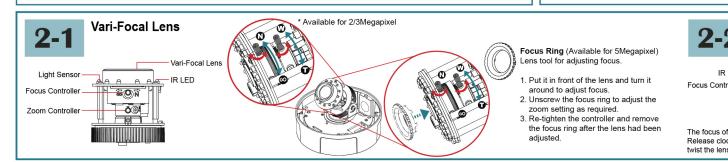





The focus of fixed lens had been set by factory. Release clockwise the controller of the focus and then twist the lens to adjust the focus if necessary.

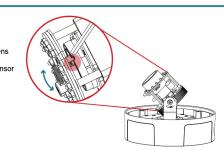

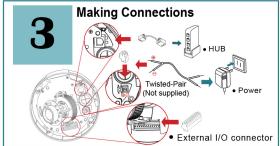

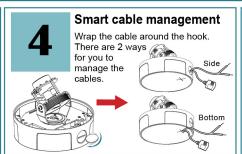


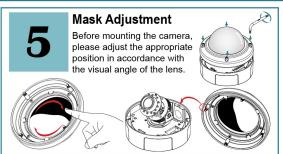





Vandal Dome Network Camera Connection Diagram

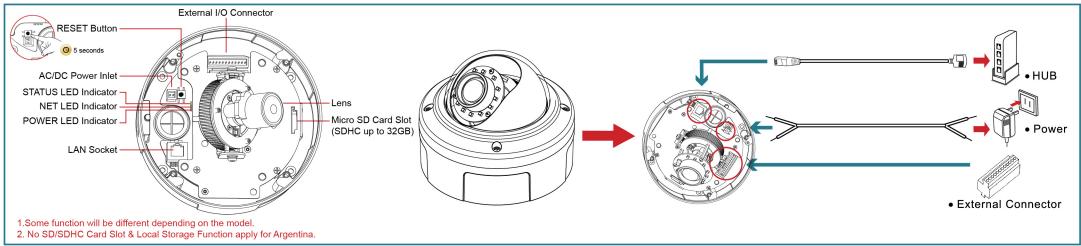


Connect the product to the switch hub and PC.

Connecting up

Prepare the product, your PC and switch hub ready for connection. Make sure that your PC has a LAN port available for connection to the network cable of the product.

Connect to the power outlet


Connect with your power adaptor directly using the wisted pair (not supplied) after plug the supplied 2pin connector into **J7** as shown.

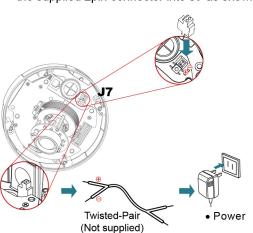

Connect the switch hub to your PC

Use a network cable and plug it in the LAN port of the product.

Plug the other end of the cable in the LAN

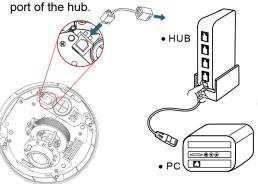


Plug the External I/O connector

Plug the supplied external I/O connector into **J8** as shown.




External I/O setting

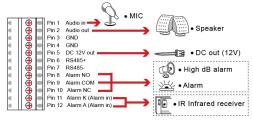

Turn on the power

Turn on the power of the PC and hub.

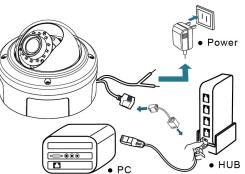

Getting Started

After you have finished install the network camera, please check if it is ready to use by the led indicator as below:

